

Installation Instructions for Lytespan Track LED Manual Controller Accent Lighting Colorspot Luminaire

CAUTION: Please read these instructions before installing the luminaire. To avoid electric shock, turn off the power from the electric panel before beginning. For safety, this luminaire must be grounded. Consult an electrician to make sure all the requirements of the US or Canadian Code for electricity and the current local regulations comply. **Keep these instructions as reference.**

WARNING: This luminaire is for ceiling installation on Lytespan track only. Do not install on Monopoint, Multipoint, Fast Track, Sloped Ceiling Adapter, Extension Wand or ProSpec Track.

IMPORTANT: Do not expose this luminaire to a room ambient temperature more than 28°C. An overheating of this luminaire could reduce the performance and the time life of the light-emitting diode (LED).

Note: This fixture uses a LED (Light Emitting Diode) light source, No maintenance is required.

A. ONE-CIRCUIT TRACK INSTALLATION:

1. Align adapter lever open on bead side. (Fig.2)
2. Align locking lever 60° counter-clockwise. (Fig.3)
3. Insert luminaire module into the track. (Fig.4)
4. Turn adapter lever clockwise. (Fig.4)
5. Turn locking lever 60°. (Fig.4)

B. TWO-CIRCUIT INSTALLATION:

1. Lift brass contact tab approximately ¼ in. (7mm). (Fig.5)
2. Follow previous steps 1-5.

C. 4-BUTTON CONTROLLER: (Fig.6)

Note: Control button display is touch-sensitive. Touch center of pictogram, an audible beep confirms new selection.

PRESET (▲▼):

- a) One-touch selection changes preset up ▲ or preset down ▼
- b) Hold preset up ▲ to scroll selection in a continuous loop.
- c) Hold preset down ▼ to scroll selection until selection 1.

BRIGHTNESS (☀/☀):

- a) One-touch selection increases/reduces brightness level by 5%.
- b) Hold setting to dim up/down in 5% increments every 1/5 second.

